


MODEL

2.0 UNFOLD


! WARNING: Keep hands and fingers away from moving or sliding parts!

VORSICHT: Halten Sie Ihre Hände von den beweglichen Teilen fern.

AVERTISSEMENT: Ne mettez pas vos mains et vos doigts à proximité des pièces mobiles et coulissantes !

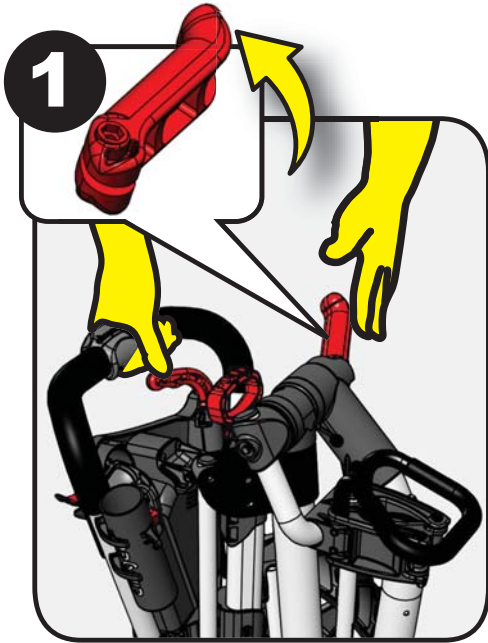

1
Unlock the main hinge LEVER.

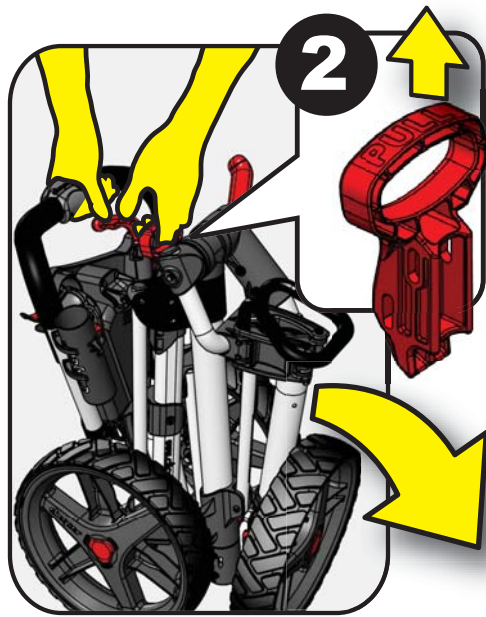


2
Pull the LATCH and lower the cart onto the front wheel.




3
Step on the front wheel with your right foot.



4
Extend the handle up and forward until the wheels extend and the handle **CLICKS** into place.

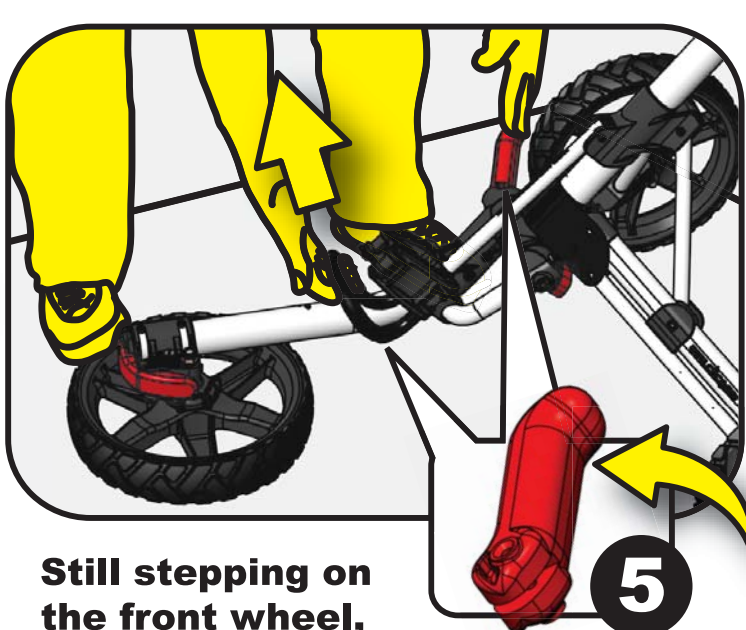

5
Still stepping on the front wheel, pull up on the lower bag support and lock the main hinge LEVER.

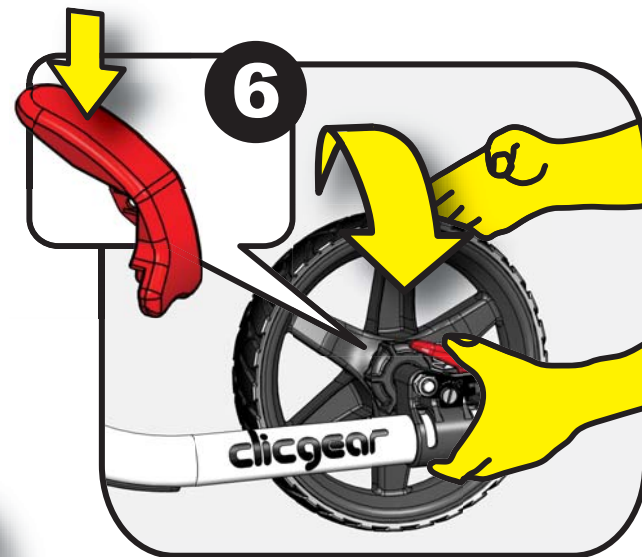


6
Squeeze the front wheel LOCK and rotate the front wheel to the vertical position.

MODEL


2.0 FOLD




1
Squeeze the front wheel LOCK and rotate the front wheel to the horizontal position.

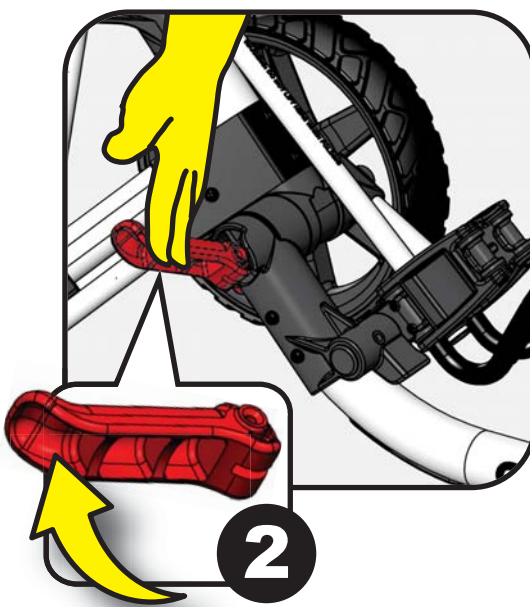


2
Release the main hinge LEVER.

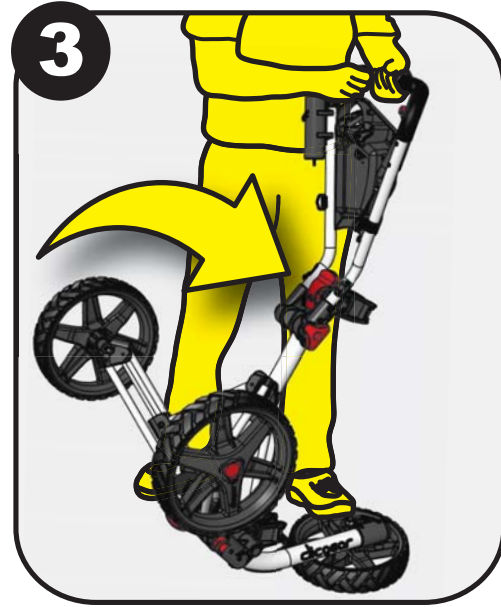


3
Fold the handle back towards the front wheel.

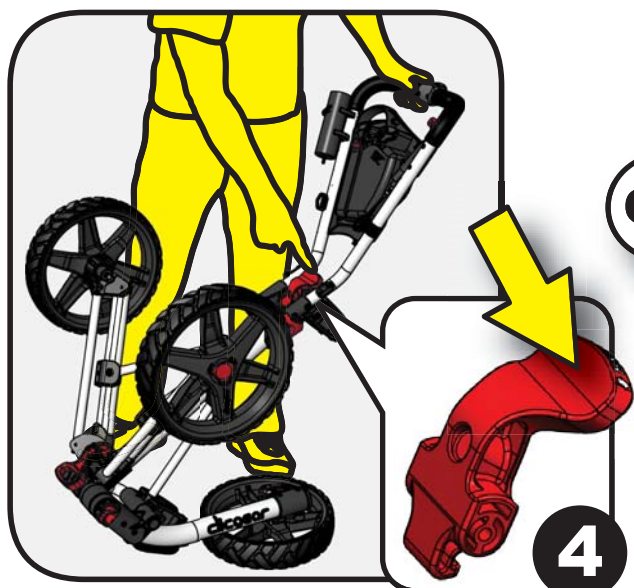

4
As the handle passes by you, push the HOOK to release the handle.

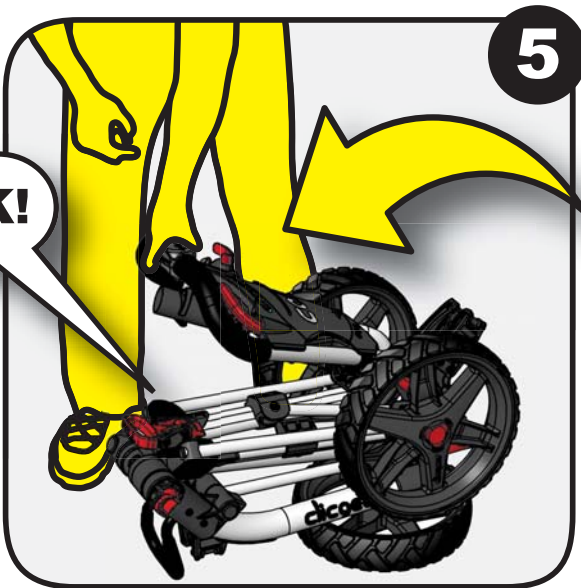

5
Push the handle down onto the cart until it **CLICKS** and locks the handle in place.

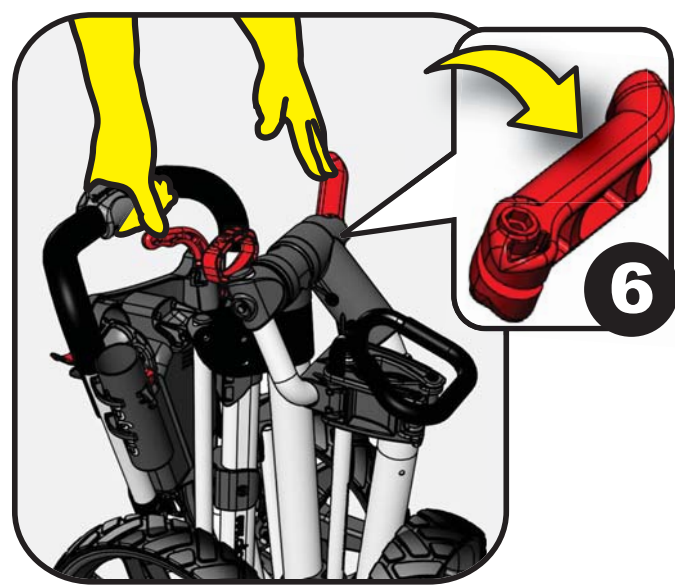

6
Lift the cart onto its wheels and lock the main hinge LEVER.