

MODEL UNFOLD


3.0

WARNING: Keep hands and fingers away from moving or sliding parts!


AVERTISSEMENT: Ne mettez pas vos mains et vos doigts à proximité des pièces mobiles et coulissantes!

VORSICHT: Halten Sie Ihre Hände von den beweglichen Teilen fern.


CUIDADO: Mantenga sus manos y sus dedos alejados de las partes que se mueven o se deslizan!

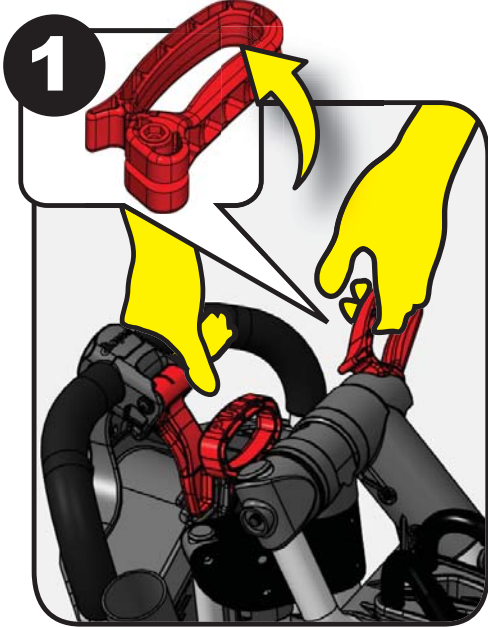

1
Unlock the main hinge LEVER.

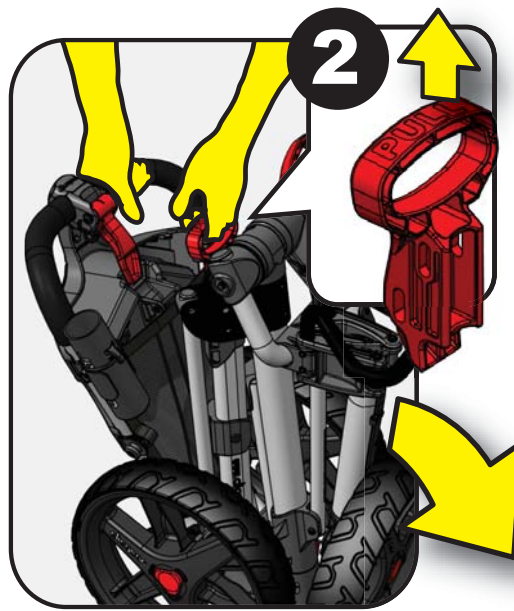


2
Pull the LATCH and lower the cart onto the front wheel.

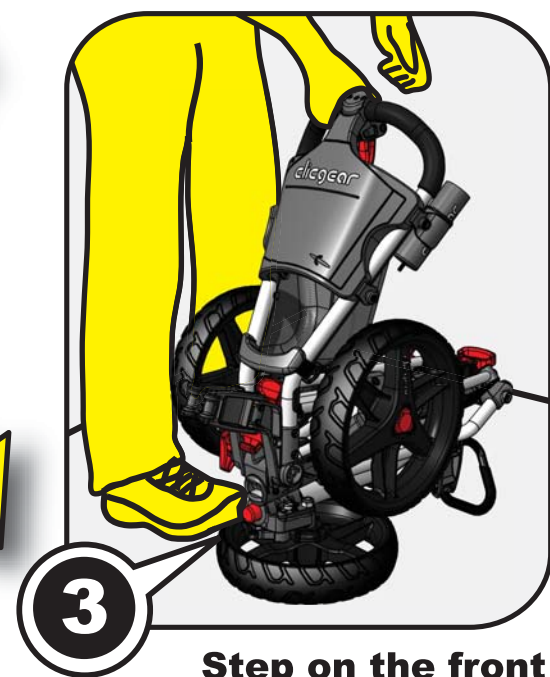


3
Step on the front wheel with your right foot.



4
Extend the handle up and forward until the wheels extend and the handle **CLICKS** into place.

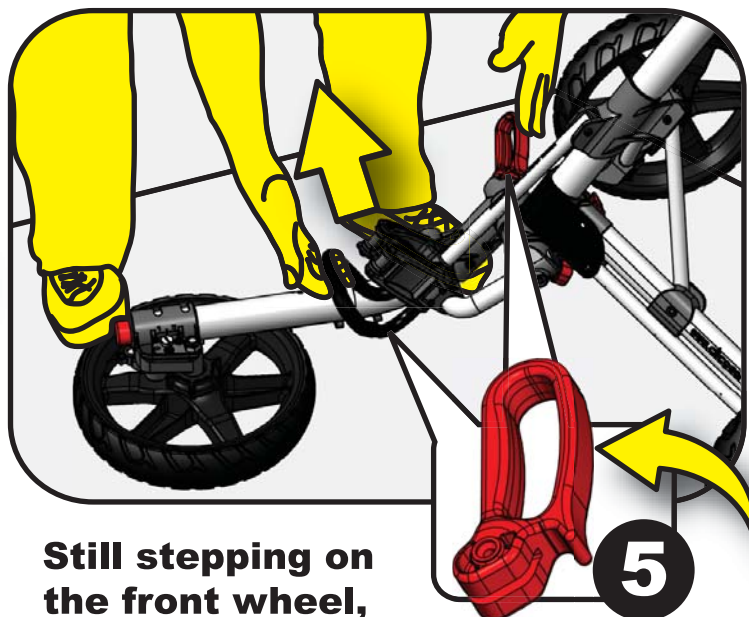


5
Still stepping on the front wheel, pull up on the lower bag support and lock the main hinge LEVER.

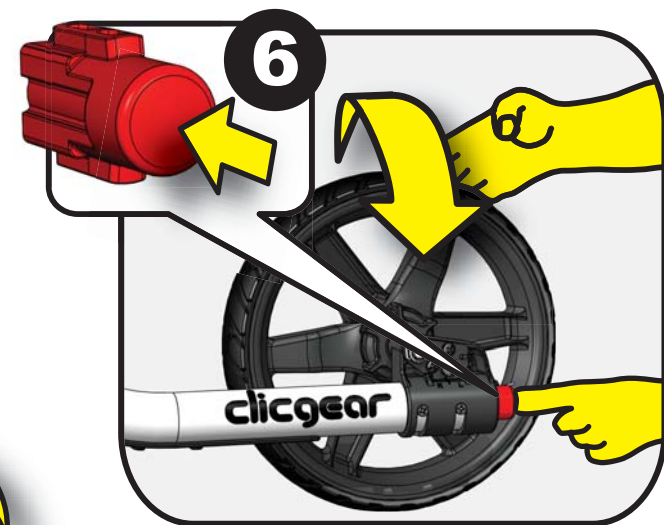


6
Push in the front wheel **BUTTON** and rotate the front wheel to the vertical position.

MODEL FOLD


3.0

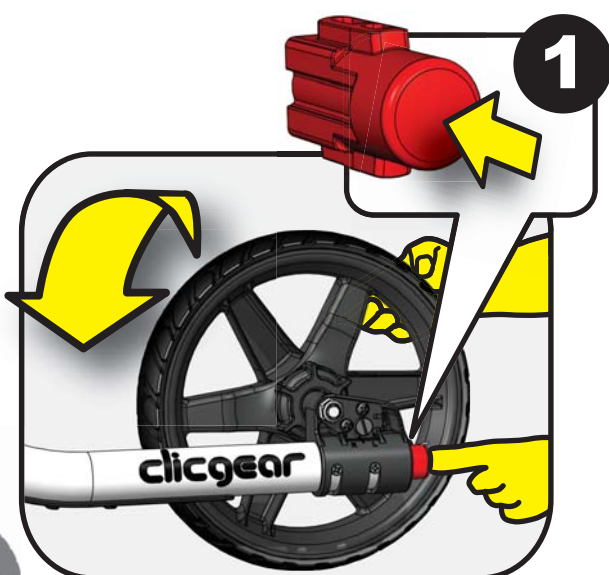


1
Push the front wheel **BUTTON** and rotate the front wheel to the horizontal position.

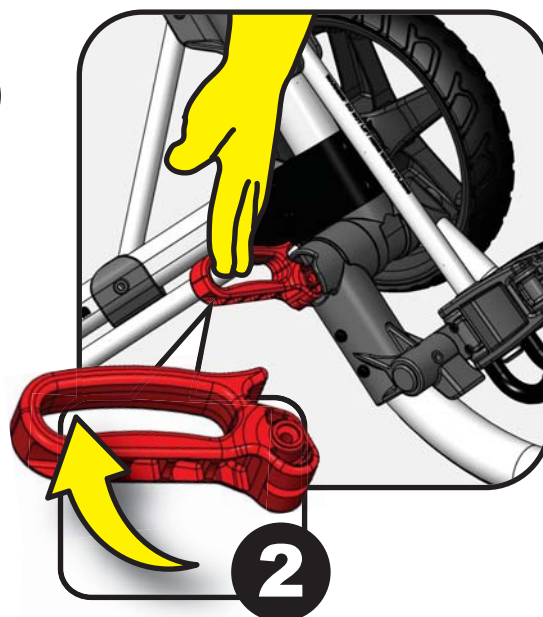


2
Release the main hinge LEVER.

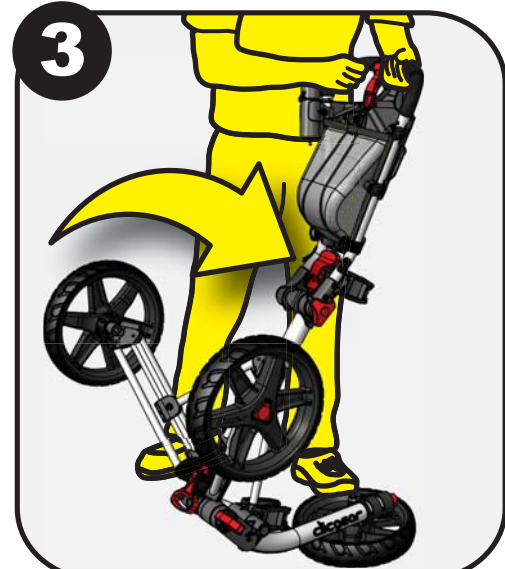


3
With your foot on the front wheel, fold the handle back towards the front wheel.

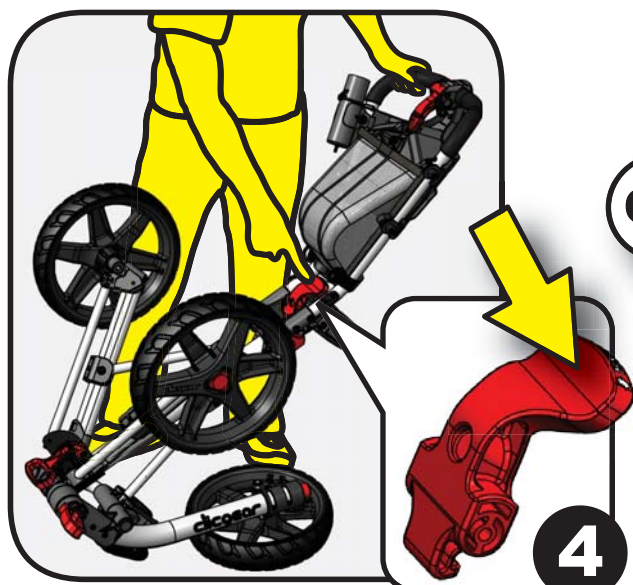

4
As the handle passes by you, push the **HOOK** to release the handle.

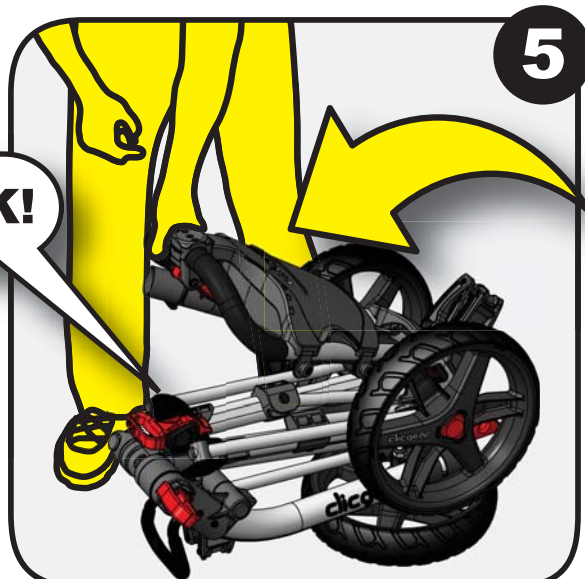

5
Push the handle down onto the cart until it **CLICKS** and locks the handle in place.

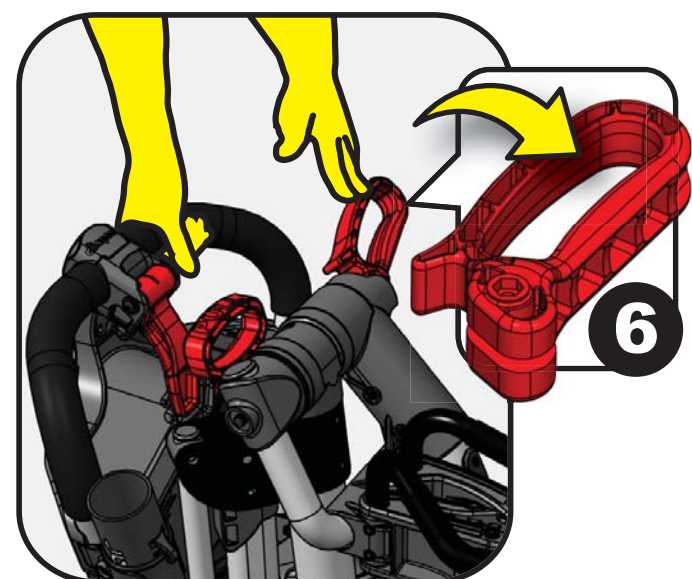

6
Lift the cart onto its wheels and lock the main hinge LEVER.